

# Operating Instructions

---

## Manual BM Rotary Control

### *Check Gas Supply is turned on*

#### **To Start**

- Make sure the control is in the Off Position.
- Depress the control knob for ten seconds.
- Keeping the control knob depressed turn counter clockwise to the Pilot / Sparker diagram position.
- Gas flows to the pilot burner and the piezo igniter gives off a spark to light the pilot.

IF IT FAILS TO LIGHT REPEAT START UP SEQUENCE.

- When the pilot lights, keep the control knob depressed for approximately ten seconds until the pilot remains alight when the control knob is released.

#### **NOTE:**

If the gas line has been interrupted when first lighting the fire, it may be necessary to follow the start up sequence several times.

#### **High / Low Flame**

Turn the control knob to light the main burner.

Small Flame Diagram is low.

Large Flame Diagram is high or anywhere in between as desired.

#### **Shut Off**

Turn the control knob clockwise to either the pilot position so that only the pilot remains alight or to the off position to extinguish the pilot light.

#### **Safety Shut Off**

The variable rotary control will automatically shut down should the pilot be interrupted or the pilot fails to light.



---

DISPLAY CENTRE: 343b Church Street, Penrose, Auckland  
TELEPHONE: 64 9 622 1148  
FAX: 64 9 622 1179  
EMAIL: [info@livingflame.co.nz](mailto:info@livingflame.co.nz)  
WEB: [www.livingflame.co.nz](http://www.livingflame.co.nz)

Living Flame   
New Zealand Technical Expertise  
© Living Flame 2012