

Operating Instructions

Variable Remote Control 885

Remote powered by 3x AAA batteries.

Turn On the Remote

Press the On / Off key on the remote. The remote display will show all active icons on the screen. A single beep from the remote will confirm reception of the command.

Turn Off the Remote

Press the On / Off key on the remote. The remote LCD display will only show the room temperature. A single beep from the remote will confirm the reception of the command.

Manual 6 Flame Levels

Turn on the Remote.

Press the mode key until the flame icon shows on the bottom left hand corner on the LCD Screen. Pressing down the arrow key once will reduce the flame height by one step until the flame is turned off. The Up arrow key will increase the flame height each time it is pressed. If the Up arrow key is pressed while the system is on but the flame is off, the flame will come on in the high position. A single beep will confirm the reception of the command.



Room Thermostat

The Remote can operate as a room thermostat. The thermostat can be set to a desired temperature to control the comfort level in a room.

To activate this function, press the thermostat key. The LCD display on the Remote will change to show that the room thermostat is On. The set temperature is now the large number displayed. To adjust the set temperature, press the up or Down arrow keys until the desired set temperature is displayed on the LCD screen of the Remote.



Smart Thermostat

The Smart thermostat function adjusts the flame height in accordance to the difference between the set point temperature and the actual room temperatures. As the room temperature gets closer to the set point the Smart function will modulate the flame down.

Turn on the Remote. Press the mode key until the word SMART appears to the right of the temperature icon on the top left of the LCD Screen. To adjust the set temperature, press the Up or Down arrow keys until the desired set point temperature is displayed on the LCD screen on the remote.



DISPLAY CENTRE: 343b Church Street, Penrose, Auckland
TELEPHONE: 64 9 622 1148
FAX: 64 9 622 1179
EMAIL: info@livingflame.co.nz
WEB: www.livingflame.co.nz

Living Flame 
New Zealand Technical Expertise
© Living Flame 2012