

Customer Operating Instructions

ELECTRONIC CONTROL

To Start the Fire:

- Confirm that the gas supply is turned on.
- Switch the High / Low switch to the High position.
- Switch the On / Off switch to the On position.
- The Electronic Control performs a safety check in approximately 10 seconds, although some controllers require 30-35 seconds.
- The auto spark ignition will start, and a clicking noise will be heard.
- The gas pilot valve will open, and the pilot will establish.
- After the pilot is established and detected by the safety detection rod, the main valve opens, and the burner lights within a few seconds.
- **Note:** In case of an interruption in the gas line during the initial ignition, it may be necessary to repeat the start-up sequence multiple times.

The High / Low Flame switch:

- Optimise the High / Low function by allowing the fire to heat up on High for 10-15 minutes before switching to Low. This maximises heat output while conserving up to half the gas supply.
- Low - Switch the High / Low switch to the Low position for a low fire effect.
- High - Switch the High / Low switch to the High position for a high fire effect.

The Fan switch (3 Button Option only):


- Once the fire has reached temperature, activate the Fan switch to circulate air throughout the space.

To Turn Off the Fire:

- To shut off, switch the On / Off switch to the Off position.

The Safety Shut-Off:

- If the pilot is interrupted or fails to ignite, the Electronic Control will automatically shut down.

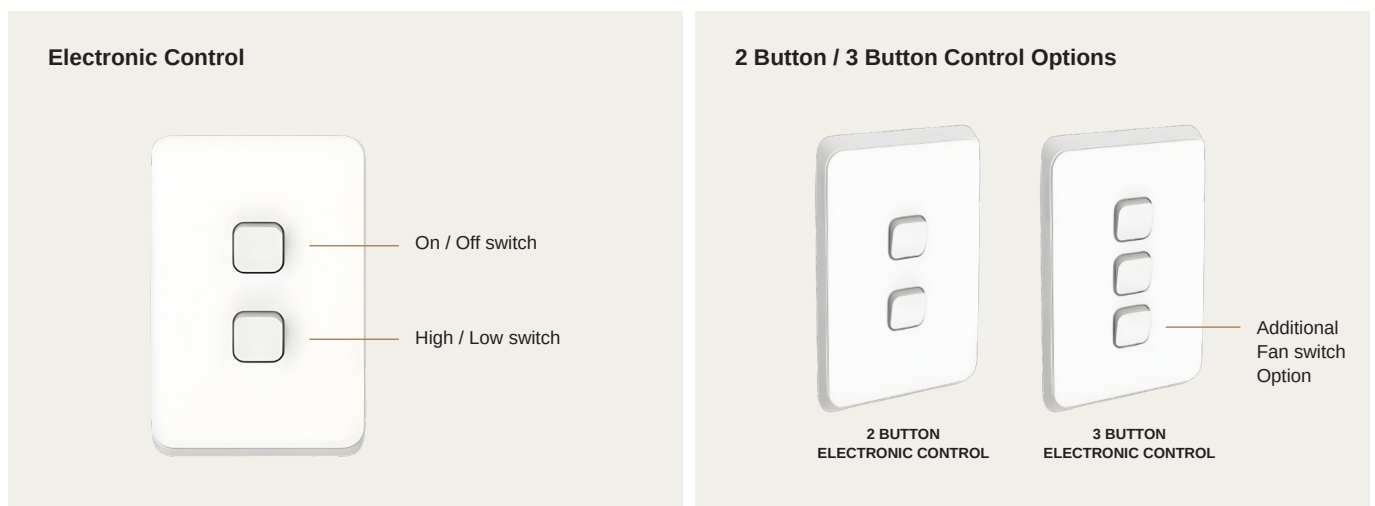

- **Note:** Your fireplace should be serviced annually by Living Flame or a registered service agent.