

Customer Operating Instructions

MANUAL ROTARY CONTROL

To Start the Fire:

- Confirm that the gas supply is turned on.
- Verify that the control is in the Off position.
- Press and hold the control knob for 10 seconds.
- While continuing to press the control knob, rotate it counterclockwise to the "Pilot/Sparker" position.
- Gas will flow to the pilot burner, while the piezo igniter will spark and light the pilot.
- Should the pilot fail to light, repeat the sequence for start-up.
- When the pilot lights, keep the control knob depressed for approximately 10 seconds until the pilot remains alight when the control knob is released.
- **Note:** In case of an interruption in the gas line during the initial ignition, it may be necessary to repeat the start-up sequence multiple times.

The High / Low Flame dials:

- Optimise the High / Low function by allowing the fire to heat up on High for 10-15 minutes before switching to Low. This maximises heat output while conserving up to half the gas supply.
- Rotate the control knob to ignite the main burner.
- Low - A small flame diagram indicates a low flame.
- High - A large flame diagram indicates a high flame, or choose any desired intermediate level inbetween.

To Turn Off the Fire:

- To shut off, rotate the control knob in a clockwise direction to either the pilot position, maintaining only the pilot light; or to the Off position to extinguish the pilot light.

The Safety Shut-Off:

- If the pilot is interrupted or fails to ignite, the Manual Rotary Control will automatically shut down.

Manual Rotary Control



- **Note:** Your fireplace should be serviced annually by Living Flame or a registered service agent.