

 
Rhode Island

PIT FIRES



LivingFlame

LIVINGFLAME.CO.NZ



HELLO

from all of us at Living Flame

THE RHODE ISLAND PIT FIRE RANGE

So you want a little something
special for your yard.
We've created these with
you in mind

(Besides, being inside is boring!)

We go to great lengths to create, manufacture and distribute the finest range of fires, with innovative design form and function, and unique benefits to complement any surroundings.

So to get the best out of your new Living Flame Rhode Island Pit Fire range, it really must be installed in accordance with these guidelines. For trouble-free, safe installation and operation, please read the following information carefully. Failure to follow these instructions can cause ongoing problems, and may void your warranties.

We've tried to smooth the way as much as possible to make the whole thing easy for you. So have a read, light your new fire, sit back and enjoy.

Technical details and specifications are subject to change, so please ensure you have the latest specifications.

DIRECTORY

at a quick glance

A	The Really Important Bits	page 5
B	Operating Instructions	page 6
C	Size Guide	page 7
D	Framing & Clearances	page 8
E	Installation Instructions	page 9
F	Operating Instructions	page 10
G	Trouble Shooting Table	page 12
H	Servicing Guidelines	page 13
I	Warranty	page 14
J	Contact	page 16



THE REALLY IMPORTANT BITS

**WARNING: Please read all the instructions carefully
before operating your new fireplace**

All Gas fireplaces should be operated BY ADULTS ONLY. Keep children at a safe distance at all times
DO NOT allow children or pets near fireplace when burning.
To ensure safe use, you must carefully read and adhere to ALL of the manufacturer's instructions. These instructions should be kept for reference for as long as you own the fireplace and should be provided to anyone planning to use this fire pit.
Keep clothing, furniture, draperies and other combustibles away.
Only use an extended lighter or long match to ignite. Never attempt to ignite with any other device.
NEVER LEAVE A BURNING FIREPLACE UNATTENDED.
Never attempt to move the fireplace while it is lit (burning) or is still hot.
Never place any objects in the fireplace or near the flame (flammable or non-flammable).
KEEP FLAMMABLE OBJECTS AT LEAST 4 FT AWAY FROM FIREPLACE WHILE LIT OR HOT.
Know where your shut off valves are located before operating your pit fire

WARNING: IF YOU SMELL GAS
Do not try to light any other gas appliances
Do not use any electrical appliances or switches
Do not use the telephone in your home
Turn off the gas supply to your house at the gas meter shut off valve, or shut the valves off at your gas bottle(s) location
Call your local gasfitter from your neighbours' house

OPERATING INSTRUCTIONS

for the Rhode Island Fire Pit Range

Keep this user manual carefully for the life of this product. The product is only to be used in combination with this manual.

Please read the instructions carefully before putting your Living Flame Brooklyn fire to use

SAFETY WARNINGS

- A. This appliance can be lit electronically or with a gas match. When lighting, follow these instructions exactly.
- B. **Before lighting**, smell all around the appliance area for gas. Be sure to smell next to the base of the appliance as some gases can be heavier than air and will settle to the floor

WHAT TO DO IF YOU SMELL GAS:

- Do not try to light any appliance.
 - Do not touch any electrical switch, do not use any phone nearby
 - Immediately leave the property and contact your local gasfitter
- C. Use only your hand to turn the gas control knob, never use tools. If the control knob won't turn by hand, call a qualified service technician. Force or attempted repair can result in additional damage
- D. Do not use the appliance if any part has been under water. Immediately call a qualified service technician to inspect the appliance and replace or repair any part which has been under water

LIGHTING INSTRUCTIONS

1. Depress button on ignitor and verify a spark is being produced between the electrode tip and receiving probe
2. Turn the gas control knob to the on position
3. Depress the ignitor button and continue holding button, then depress the blue gas flow button. Once the burner has lit, release the ignitor button, but continue holding the blue gas flow button for a further 15 seconds
4. Release the blue gas flow button and the flame should continue

EXTINGUISHING INSTRUCTIONS

1. Turn the gas control knob to the "OFF" position. If using a portable LPG bottle, it's best to also turn off the bottle.

INITIAL USAGE PROCEDURE

When you first light the appliance, you may notice that it produces heat which may have an odour. It may require 3 to 4 hours continuous burn for the odour to stop.



SIZE GUIDE

Use the size guide to create a cavity for the Rhode Island pit fire to fit within.

Remember to allow drainage & ventilation

	<table><tr><th colspan="2">ROUND PIT FIRE</th></tr><tr><td>Diameter</td><td>533MM</td></tr><tr><td>Weight</td><td>4KG*</td></tr><tr><td>MJL</td><td>58</td></tr><tr><td>Kw</td><td>16</td></tr></table>	ROUND PIT FIRE		Diameter	533MM	Weight	4KG*	MJL	58	Kw	16
ROUND PIT FIRE											
Diameter	533MM										
Weight	4KG*										
MJL	58										
Kw	16										
	<table><tr><th colspan="2">LARGE ROUND PIT FIRE</th></tr><tr><td>Diameter</td><td>812MM</td></tr><tr><td>Weight</td><td>10KG*</td></tr><tr><td>MJL</td><td>95</td></tr><tr><td>Kw</td><td>26</td></tr></table>	LARGE ROUND PIT FIRE		Diameter	812MM	Weight	10KG*	MJL	95	Kw	26
LARGE ROUND PIT FIRE											
Diameter	812MM										
Weight	10KG*										
MJL	95										
Kw	26										
	<table><tr><th colspan="2">RECTANGULAR PIT FIRE</th></tr><tr><td>Dimensions</td><td>654 x 345MM</td></tr><tr><td>Weight</td><td>3.6KG*</td></tr><tr><td>MJL</td><td>58</td></tr><tr><td>Kw</td><td>16</td></tr></table>	RECTANGULAR PIT FIRE		Dimensions	654 x 345MM	Weight	3.6KG*	MJL	58	Kw	16
RECTANGULAR PIT FIRE											
Dimensions	654 x 345MM										
Weight	3.6KG*										
MJL	58										
Kw	16										
	<table><tr><th colspan="2">LARGE RECTANGULAR PIT FIRE</th></tr><tr><td>Dimensions</td><td>1085 x 345MM</td></tr><tr><td>Weight</td><td>5.4KG*</td></tr><tr><td>MJL</td><td>106</td></tr><tr><td>Kw</td><td>29</td></tr></table>	LARGE RECTANGULAR PIT FIRE		Dimensions	1085 x 345MM	Weight	5.4KG*	MJL	106	Kw	29
LARGE RECTANGULAR PIT FIRE											
Dimensions	1085 x 345MM										
Weight	5.4KG*										
MJL	106										
Kw	29										
	<table><tr><th colspan="2">SQUARE PIT FIRE</th></tr><tr><td>Dimensions</td><td>654 x 654MM</td></tr><tr><td>Weight</td><td>7.3KG*</td></tr><tr><td>MJL</td><td>84</td></tr><tr><td>Kw</td><td>23</td></tr></table>	SQUARE PIT FIRE		Dimensions	654 x 654MM	Weight	7.3KG*	MJL	84	Kw	23
SQUARE PIT FIRE											
Dimensions	654 x 654MM										
Weight	7.3KG*										
MJL	84										
Kw	23										


*Weight is of burner only & does not include effect

D

FRAMING & CLEARANCES + CLEARANCES TO COMBUSTIBLES

FRAMING AND CLEARANCES

- Illustrations reflect typical installations and are for design purposes only
 - Illustrations/diagrams are not drawn to scale
- Actual installation may vary due to individual preferences

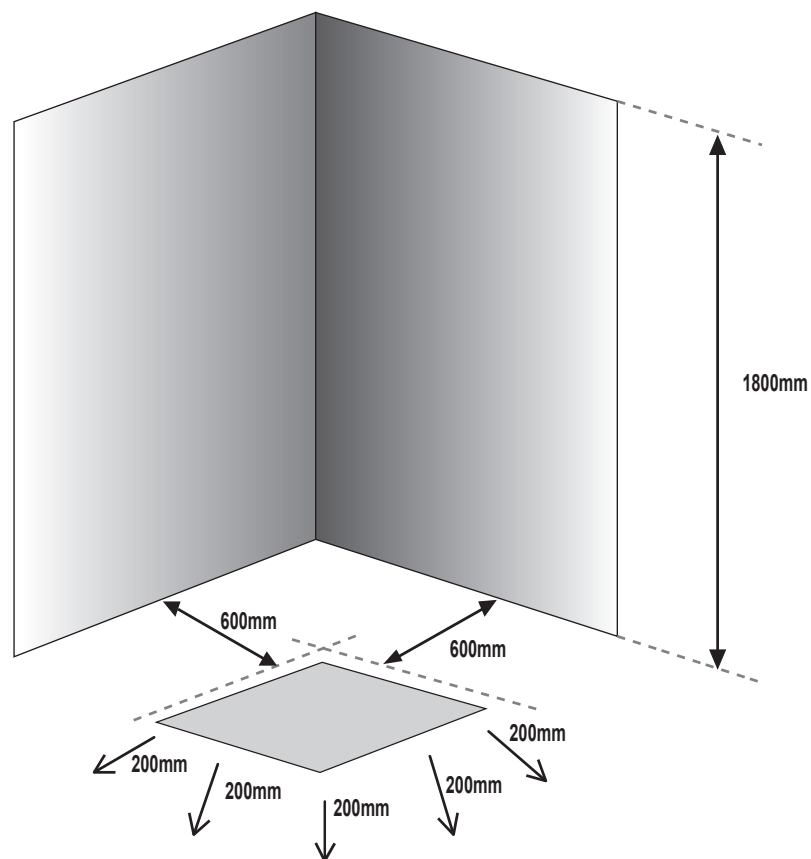

INSTALLATION INSTRUCTIONS

for the Rhode Island Fire Pit Range

This appliance is a Decorative Gas Appliance for OUTDOOR USE ONLY & MUST NOT be used for cooking.


Place the pit fire on a flat, stable surface in an outdoor location, such as a patio or a deck. This location must be adjacent to the gas supply line or LPG bottle location. DO NOT locate the appliance where it will get excessively wet or submerged in water.

Place the pit fire on a flat, stable surface in an outdoor location, such as a patio or a deck. This location must be adjacent to the gas supply line or LPG bottle location. DO NOT locate the appliance where it will get excessively wet or submerged in water.

ALL gas installation work should be completed by a qualified GASFITTER.

- Carefully remove all burner components from packaging
- Check for damage. Do not use any damaged components
- Read all instructions before beginning installation. Follow these instructions carefully during installation to ensure the maximum safety and benefit

LOCATION

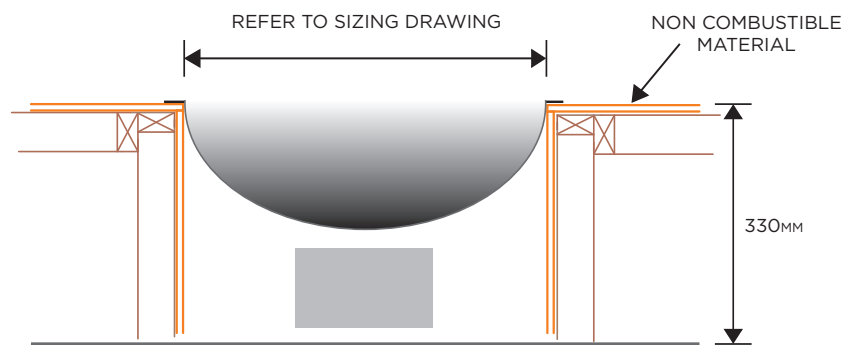

VENTILATION & DRAINAGE NEED TO BE PROVIDED AT BASE OF THE STRUCTURE

- Position the burner in the desired location. This location must be adjacent to the gas supply line. You must have easy access to the control box, within 600mm of the burner, after installation and connection because the ON/OFF valve is used to turn the burner on and off
- The burner should be positioned in such a way that the burner can always be lifted to access the controls beneath



OPERATING INSTRUCTIONS

for the Rhode Island Fire Pit Range

GLASS/LAVA ROCK INSTALLATION

Spread glass/lava rock evenly over the burner area. Use all glass/lava rock provided for best effect. Keep the glass clear of the Spark Electrode and Thermocouple to avoid accidental blockage.

LOG INSTALLATION

Position logs over the glass/lava rock base, taking care not to touch any Spark Electrode and Thermocouple to avoid accidental blockage.

DO NOT BURN WITHOUT GLASS OR LAVA ROCK IN THE BURNER

FUEL

Before making the gas connection, ensure the appliance being installed is compatible with the available gas type

GAS PRESSURE

Proper input pressure is required for optimum performance. Gas line sizing requirements need to be made following ASNZS5601

Pressure requirements for appliances are shown in the table below. Minimum pressure must be met when other household gas appliances are operating

CORRECTIVE ACTIONS	NATURAL GAS	PROPANE
Minimum Outlet Pressure	2 KPA	2.5 KPA
Minimum Inlet Pressure	4 KPA	4 KPA

OPERATING INSTRUCTIONS



for the Rhode Island Fire Pit Range

Incoming gas should be piped to the 10mm Soft Copper pipe on the manual shutoff valve

GAS SETUP

Spread glass/lava rock evenly over the burner area. Use all glass/lava rock provided for best effect. Keep the glass clear of the Spark Electrode and Thermocouple to avoid accidental blockage.

- With the burner and control fitted at their locations, attach the gas supply to the incoming gas supply feed on the rear of the control box, checking that the 10mm Soft Copper flare fitting is secured firmly, using 2 wrenches.
 - Locate the metal flex-line gas hose and tighten securely to the outgoing gas supply feed on the rear of the control box, using 2 wrenches.
- A. Securely tighten the flare nut on the free end of the flex-line gas hose to the orifice on the burner.
- For LPG installations, the air shutter should be left open setting. To adjust, loosen the small securing screw and rotate the air shutter. Closing the air shutter will produce more yellow flame but may also cause soot.
 - Connect the sensitive thermocouple end to the rear of the blue gas flow button, using the “split nut adaptor”.
 - Plug the black sparker wire into the ignitor box.
 - Unscrew the front of the ignitor button and fit an AAA battery. Reassemble the button and test.
- B. You should see a spark at the spark electrode. There should be a 1-2mm gap between sparker and electrode.
- CHECK ENTIRE SYSTEM FOR LEAKS BEFORE OPERATING.
 - Test the appliance operation using the steps found in Lighting Instructions, & check again for leaks.

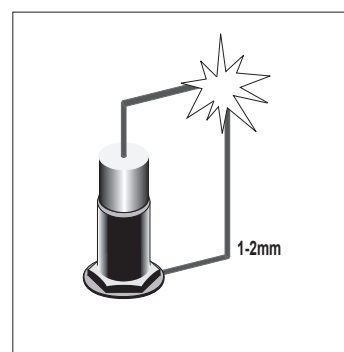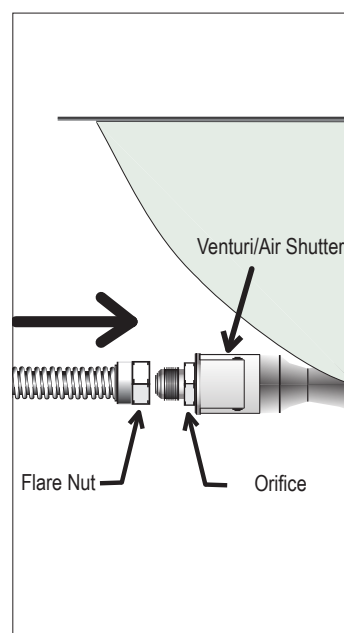



TROUBLE SHOOTING TABLE

for the Rhode Island Fire Pit Range

SYMPTOM	POSSIBLE CAUSES		CORRECTIVE ACTIONS
Crystal Fire won't light.	A	No LP in tank, or NG main not turned on.	Check the LP (propane) tank. You may be out of gas. Or check Natural Gas valve at main.
	B	Plugged burner orifice.	Check the burner orifice for stoppage, Remove stoppage.
Low flames or won't stay lit.	A	Manual shutoff valve (on/off control knob) open or not in-stalled between LP tank and appliance.	Close LP tank and manual shutoff valves. Open LP tank valve first, THEN the manual shutoff valve.
Blue flames.	A	This is a result of normal operation and flames will begin to yellow as unit is allowed to burn for 16-29 minutes.	Do nothing.
	B	Improper air/fuel mixture related to air shutter position.	Close air shutter. (for LP, leave 1/4" open, Natural Gas 1/16" open)
Metallic noise.	A	Noise is caused by metal expanding and contracting as it heats up and cools down, similar to the sound produced by a furnace or heating duct. This noise does not affect the operation or longevity of the appliance.	Do nothing.
Decorative Beads cracking or splitting.	A	Heat and/or abrupt temperature changes.	This is a property of gas and may happen occasionally. Do nothing. This is completely normal.
Sparker makes clicking sound but no visible spark is produced.	A	Sparker is improperly grounded.	Refer to section F, page 11 for grounding instructions. Check all wire connections.
	B	Ignition or ground wire not plugged in.	
	C	Ignitor tip set too far from grounding probe.	Check that tip of sparker is within 1/4" of grounding probe. Gently bend ignitor tip or grounding probe by hand to achieve a smaller gap.



SERVICING GUIDELINES

for the Rhode Island Fire Pit Range

SERVICING

This appliance should be serviced and checked annually, by a qualified service technician, in adherence with House Insurance policies.

The use of a cover is highly recommended to keep your appliance looking new and ensuring extended, trouble-free operation.

MAINTENANCE AND SERVICES TASKS TABLE

For service calls: Contact the dealer your product was purchased from first. Contact Living Flame at info@livingflame.co.nz if further assistance is needed.		
INSPECT	MAINTENANCE TASKS	
Burner Assembly	1	Remove decorative glass and examine burner. Vacuum and wipe out as needed. Use caution when cleaning these areas.
	2	Inspect for warping and corrosion. Repair as necessary.
	3	Check the hose connecting the LP gas cylinder to ensure it is not damaged. Replace as necessary.
	4	Verify air shutter areas is clean.
Burner Ignition and Operation	1	Verify all gas connections are tight and leak-free.
	2	Clean burner top, inspect for plugged ports, corrosion, or deterioration. Replace burner if necessary.
	3	Inspect for flame problems.
	4	Verify air shutter is clear of dust and debris and is in correct position for the gas type being used.
	5	Inspect orifice for soot, dirt, or corrosion.
	6	Verify manifold and inlet pressures. Adjust regulator as required.
Gas Hose with Regulator	1	The gas hose with regulator supplied with appliance must be used for LP installations. The replacement must be those specified by the appliance manufacturer.



WARRANTY

for the Rhode Island Fire Pit Range

**FIRE SURE LIFETIME BODY GUARANTEE,
ONE YEAR BURNER ASSEMBLY AND CONTROL COVER,
ONE YEAR LABOUR COVER,
THREE MONTH PAINT COVER**

Inbuilt Fireplace bodies are constructed for a minimum working life of 15 years when installed in compliance with ASNZS5601, C1 Outbreak of Fire & manufacturer's installation, operating and maintenance instructions.

FIRE SURE LIFETIME BODY GUARANTEE

This is a Fire Sure Lifetime Replacement Guarantee that covers the fireplace body manufactured or imported by Living Flame Fires and only covers the replacement of the fire body where an irreparable defect, due to material or manufacturing failure, occurs within the lifetime of the fire. The Fire Sure Lifetime Body Guarantee does not cover faults caused by incorrect installation, incorrect commissioning or misuse, and the fire should be installed and maintained in compliance with the guarantee and all conditions of the guarantee fulfilled.

ONE YEAR BURNER COVER

This is a One Year Replacement Guarantee that covers the Outdoor Greatroom or Living Flame burner parts used in the manufacturing of a Living Flame Fire. The manufacturer only covers the replacement of a burner part where an irreparable defect, due to material or manufacturing failure, occurs within the first year from date of supply by Living Flame.

THREE MONTH PAINT COVER

This is a Three Month Guarantee covering the painted surface of the pit fire. It is a warranty against paint peeling and flaking off during normal use of the fire. It excludes discolouration as this is a normal property of the painted surface when heated by the flames. It also excludes any scratching of the painted surface that may occur at the time of installation. It is the responsibility of the installer to touch up any paint surfaces if necessary as it is part of a normal installation service. This does not affect the running of the fire but is aesthetically pleasing to have done. Please check with your annual service provider.



WARRANTY

for the Rhode Island Fire Pit Range

EXCLUSION FROM GUARANTEE

This Fireplace Replacement Guarantee excludes any costs associated with the removal or replacement on site of the fireplace at the owner's request, required for finishing work or refurbishment work to the fireplace. This guarantee is only valid when the fire has been installed in New Zealand.

INSTALLATION

Living Flame Fireplaces must be installed to comply with:

**New Zealand Standards and Building Codes where relevant;
Living Flame Installation Instructions;
Living Flame Operating Instructions;
Living Flame Maintenance Instructions.**

Living Flame Fireplaces must be installed free from dampness and free from corrosive elements.

GUARANTEE AND WARRANTY VALIDITY

Guarantee claims will only be considered when completed by a Living Flame approved serviceperson in accordance with Living Flame procedures.

OPERATING

Living Flame Fireplaces must be operated in accordance with Living Flame Operating Instructions.

Living Flame Fireplaces should be used only for the burning of the correct gas: The type of gas to be used should be specified at the time of ordering the unit.

Living Flame Fireplaces must only be operated once they have been installed to Living Flame's installation instructions.

DOMESTIC USERS

Living Flame Fireplaces should be inspected, cleaned, serviced and re-commissioned at least once yearly throughout the lifetime of the fire to maintain the guarantee.

COMMERCIAL USERS

Living Flame Fireplaces should be inspected, cleaned, serviced and re-commissioned at least twice yearly throughout the lifetime of the fire to maintain the guarantee

This Guarantee should be kept in a safe place along with the operating Instructions.



CONTACT

us at Living Flame

Display & Head Office , Auckland

343B Church Street

Penrose 1061, Auckland

New Zealand

T. +64 9 622 1148

E. info@livingflame.co.nz

www.livingflame.co.nz

Copyright © 2018 by Living Flame Ltd. All rights reserved.

No part of this publication may be reproduced, distributed, or transmitted in any form
or by any means, including photocopying, recording, or other electronic or mechanical methods,
without the prior written permission of Living Flame Ltd.